

*If you are using a printed copy of this procedure, and not the on-screen version, then you **MUST** make sure the dates at the bottom of the printed copy and the on-screen version match. The on-screen version of the Collider-Accelerator Department Procedure is the Official Version. Hard copies of all signed, official, C-A Operating Procedures are available by contacting the **ESSHQ Procedures Coordinator, Bldg. 911A***

C-A OPERATIONS PROCEDURES MANUAL

8.36.2 Calibration of the RKI Instruments GasWatch 2 Personal Oxygen Monitor

Text Pages 2 through 4

Attachments

Hand Processed Changes

<u>HPC No.</u>	<u>Date</u>	<u>Page Nos.</u>	<u>Initials</u>
_____	_____	_____	_____
_____	_____	_____	_____
_____	_____	_____	_____
_____	_____	_____	_____

Approved: _____ *Signature on File* _____
Collider-Accelerator Department Chairman Date

A. Etkin

8.36.2 Calibration of the RKI Instruments GasWatch 2 Personal Oxygen Monitor

1. Purpose

- 1.1 This procedure details the process to be used to calibrate the RKI Instruments Model GasWatch 2 Personal Oxygen Monitor.

2. Responsibilities

- 2.1 The C-A Gas Monitor Calibrator shall set the zero of the span annually the RKI Instruments Model GasWatch 2 Personal Oxygen Monitor. In addition the check of helium sensitivity shall be performed.
- 2.2 The C-A Gas Monitor Calibrator shall record all data on the RKI Instruments Model GasWatch 2 Personal Oxygen Monitor Calibration Record Sheet [[C-A-OPM-ATT 8.36.2.a](#)], record data in the calibration database, and attach updated calibration label.

3. Prerequisites

- 3.1 Oxygen Monitor Zero Kit containing:
 - 3.1.1 Cylinder of Nitrogen or Helium gas (>99.99% pure).
 - 3.1.2 Regulator with flow meter set to a rate of 0.5 LPM for cylinder in 3.1.1
 - 3.1.3 Calibration adapter for the model GasWatch 2
 - 3.1.4 Non-adsorbent tubing
- 3.2 Helium Sensitivity Check Kit containing:
 - 3.2.1 Cylinder of 10% He balance air mixture (analyzed to 2%)
 - 3.2.2 Fixed Flow Regulator with flow rate of 0.5 LPM for cylinder in 3.2.1

4. Precautions

- 4.1 This procedure shall be performed in a ventilated location with an exhaust to the outside.

5. Procedures

- 5.1 Normalize sensor readings to fresh air by
 - 5.1.1 In a fresh air environment turn on the GasWatch2 by pressing and holding the POWER/MODE button, fig. 1, for one second.
 - 5.1.2 Press and hold the AIR button for approximately three seconds to allow the monitor to set the span for the Oxygen readings [20.9%].
- 5.2 Assemble the calibration kit for the GasWatch2 by
 - 5.2.1 Snap the adapter plate over the sensor area, fig 2.
 - 5.2.2 Attach the tubing to the Calibration adapter.
 - 5.2.3 Attach the regulator to the cylinder of Nitrogen or Helium gas.
 - 5.2.4 Attach the tubing to the regulator output.

- 5.3 To set the span reading [zero Oxygen reading]
 - 5.3.1 Normalize sensor readings as per 5.1.
 - 5.3.2 Assemble the calibration kit as per 5.2.
 - 5.3.3 With the GasWatch2 off, press and hold the AIR button, then press and hold the POWER/MODE button.
 - 5.3.4 Release both buttons when you hear a "beep".
 - 5.3.5 The calibration value will be displayed use the AIR button as necessary to adjust the value to 0.0.
 - 5.3.6 Press the POWER/MODE button to accept the calibration value and proceed to the calibration screen.
 - 5.3.7 Flow gas for ~ 2 min.
 - 5.3.8 Press the POWER/MODE button
 - 5.3.9 When the GasWatch2 begins the startup process the calibration is completed, the gas flow can be shut off and the adapter removed.

- 5.4 To perform the check of helium sensitivity
 - 5.4.1 Normalize sensor readings as per 5.1.
 - 5.4.2 Assemble the calibration kit as per 5.2 except use the 10% Helium in air mixture [18.8% Oxygen] cylinder instead of the calibration gas cylinder.
 - 5.4.3 Flow gas for ~ 2 min.
 - 5.4.4 Record the Oxygen reading on the calibration record sheet.

- 5.5 To verify proper settings of the alarms
 - 5.5.1 With the GasWatch2 off, press and hold the AIR button, then press and hold the POWER/MODE button.
 - 5.5.2 As soon as the display appears release the AIR button.
 - 5.5.3 When the unit beeps release the POWER/MODE button
 - 5.5.4 The low alarm setting is displayed and should be 19.5%.
 - 5.5.5 Press the Power/Mode button to display the high alarm, which should be 23.5%.
 - 5.5.6 The AIR button can be used to raise the setting. This control wraps around.
 - 5.5.7 Press the POWER/MODE button after verifying the high alarm setting and the GasWatch2 will start its startup sequence.
 - 5.5.8 Record the verification on the calibration record sheet.

- 5.6 Verify that in fresh air the Oxygen reading is 20.9% \pm 0.1%.

- 5.7 Upon successful completion of this procedure, attach a new calibration label and record appropriate data in the calibration database. Calibration labels are available through BNL Stock, Stock Number S-33844, or equivalent.
 - 5.7.1 Upon failure of any steps within this procedure, document failure on record sheet, repair gas monitor as per manufacturers instruction, and re-perform calibration procedure.

6. Documentation

6.1 Calibration database records shall be maintained for a minimum of three (3) years.

7. References

7.1 RKI Instruments GasWatch2 Operator's Manual

7.2 [C-A-OPM 13.8.2 "Calibration"](#).

8. Attachments

8.1 [C-A-OPM-ATT 8.36.2.a "RKI Instruments GasWatch 2 Personal Oxygen Monitor Calibration Record Sheet"](#)

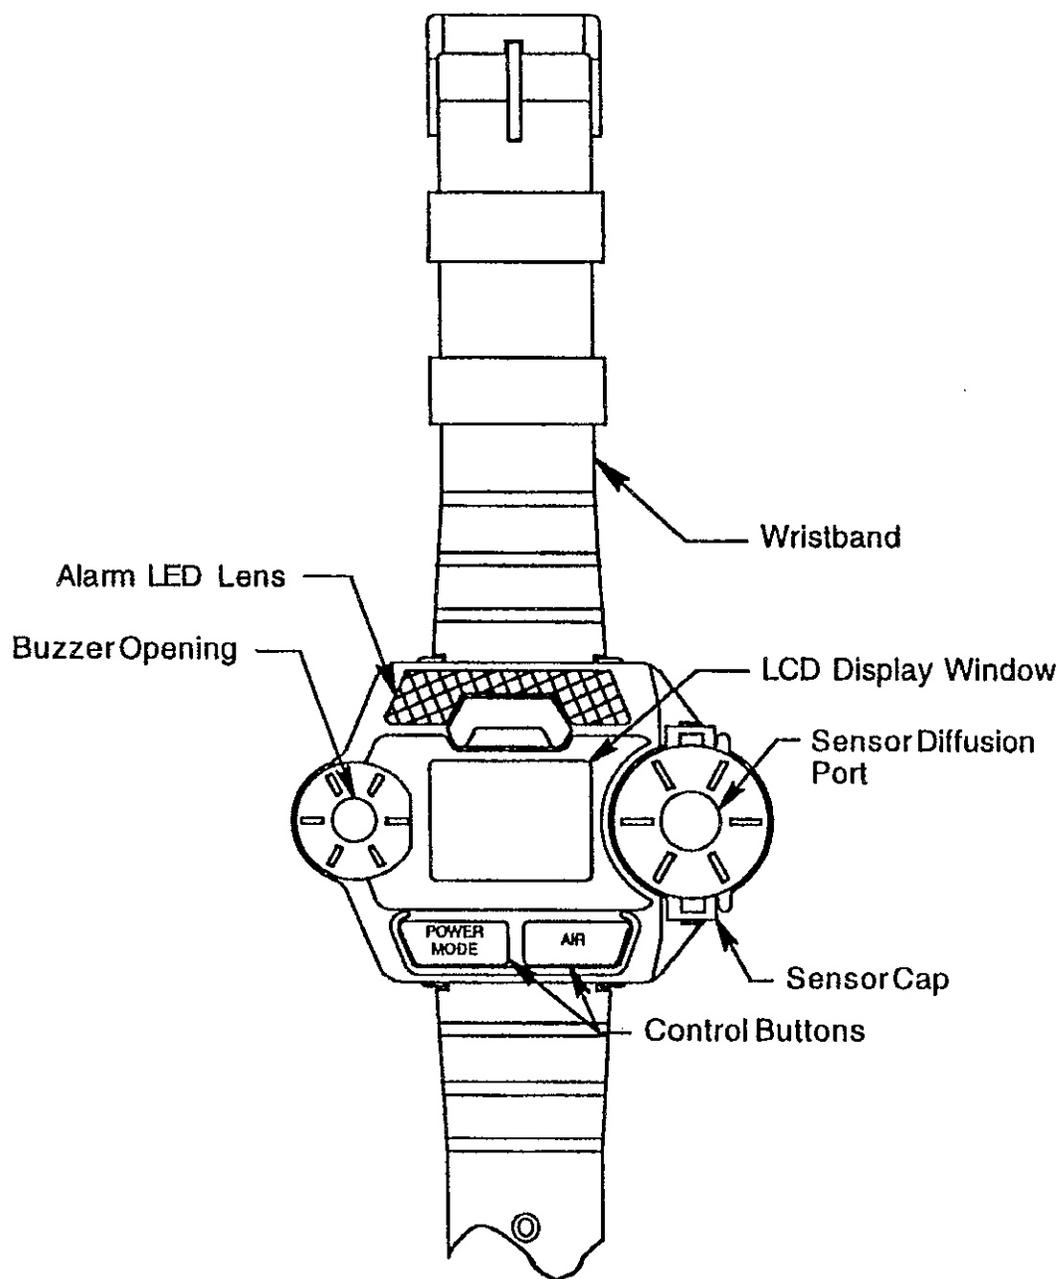


Figure 1: Components of the GasWatch 2